



**ELECTRIC GRIDDLE
MODEL NO: WJ-026**



ITEM # 2556

IMPORTANT SAFEGUARDS

1. **Read and save all instructions!**
2. **WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.
3. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons including the following.
4. Read all instructions before using appliance.
5. Do not touch hot surfaces always use handles.
6. Do not immerse probe, cord or plug in water or other liquids. See instructions for cleaning.
7. This appliance is not for use by children.
8. Close supervision is necessary when this appliance is used near children.
9. Do not use appliance unattended.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
11. Always attach probe to griddle before plugging cord into wall outlet. To disconnect turn temperature control knob to "OFF", then remove plug from wall outlet.
12. Do not operate any damaged appliance. Do not operate with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
13. Do not use outdoors or while standing in a damp area.
14. Do not place on or near a hot gas or electric burner or in a heated oven.
15. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
16. Use extreme caution when disposing of hot grease.
17. Do not use appliance except as indicated in these instructions.
18. The use of accessory attachments not recommended by this appliance manufacturer may cause injuries.
19. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
20. Do not place grease cup, warming drawer or spatula rest on top of hot grill surface.
21. The connector must be removed before the appliance is cleaned and the appliance inlet must be dried before the appliance is used again.
22. Only the appropriate connector must be used.
23. The temperature of accessible surfaces may be high when the appliance is operating.
24. **WARNING:** Charcoal or similar combustible fuels must not be used with this appliance.

SAVE THESE INSTRUCTIONS!

USING YOUR GRILL

1. Before first use, see CLEANING INSTRUCTION and HINTS FOR CARE AND USE OF NON-STICK SURFACE.
2. Insert warming drawer and grease cup into rails under grill. Turn probe to OFF position and attach securely in place.
3. Condition the non-stick surface with vegetable shortening before heating and if necessary remove excess oil with paper towel. Plug into outlet. Align temperature control knob with pointer.
4. The unit is preheated when the light on the probe goes off. The light will cycle during use indicating the proper temperature is being maintained.
5. When finished cooking, turn probe OFF, unplug and cool before cleaning.
6. CAUTION: Grill surfaces are hot during use.

CLEANING INSTRUCTIONS

1. NOTE: No parts should be placed in an automatic dishwasher.
2. Unplug and allow to cool before cleaning or moving.
3. Remove cord set (DO NOT IMMERSE IN WATER), wipe with a damp cloth and dry thoroughly.
4. Remove grease cup and warming drawer; empty contents. Wash grill, warming drawer and grease cup in soapy water; rinse and dry thoroughly.
5. CAUTION: Probe and probe receptacle must always be completely dry before use.

HINTS FOR CARE AND USE OF NON-STICK SURFACE

1. To avoid scratching the non-stick surface, do not stack objects on grill.
2. Use medium to low heat for best cooking results. Very high temperatures can cause discoloration and shorten the life span of any non-stick surface. If higher temperatures are necessary, preheat on medium for a few minutes.
3. Use only nylon plastic or wooden utensils with care to avoid scratching the non-stick surface. Never cut food on the griddle.
4. Remove stubborn stains with a plastic scouring pad and mild dish washing liquid.

ACCESSORIES

Please note that your grill has the following accessories:

1. Warming drawer.
2. Probe (inside the upper polyfoam).
3. Grease cup (inside the upper polyfoam)

DO NOT USE STEEL WOOL IF THE POWER CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER OR SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

TECHNICAL DATA

OPERATING VOLTAGE: 120 Vac/60 Hz

POWER: 1600W

LIMITED WARRANTY

Thank you for purchasing a top quality **Crofton** product. This **ELECTRIC GRIDDLE ITEM # 2556, Model # WJ-026** was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship until **JANUARY 31ST, 2006 or 1 YEAR AFTER DATE OF PURCHASE WITH PROOF OF RECEIPT.**

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to commercial use.

This warranty is non-transferable and applies only to the original purchaser and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, replacement or refund. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of or in connection with use of this product. This warranty is valid only in the United States of America. This warranty gives you specific legal rights. However you may have other rights that vary from State to State. Some States do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

In case you find the product to be defective please send it within the warranty period to our service center. To avoid transport damages please send the product in the original packaging. In return you will receive your repaired item, a new product or a refund. Please fill out the Warranty Card and send it together with the product and purchase receipt.

To arrange pick-up of the defective item please call our service center:

Schenker International Inc.

Tel: 1-888-367-7373 (Business hours Mon-Fri 9:00am - 4:00pm CT)

Website: <http://www.wk-usa.com>