



INSTRUCTION MANUAL

Steam Cleaner

Model No. PSC-350

Item No. 4294-05



PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS APPLIANCE.

TABLE OF CONTENTS

Index	P.1
Important Safety Instructions	P.2
General Safety Instructions	P.3
List of Main Parts, Tech. Specifications, Contents of Packaging	P.4
Operation	P.5-6
Maintenance	P. 6
Service Center	P. 6
Warranty Information	P.7
Warranty Card	P.8



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should also be observed, including the following. **Please read and save all instructions.**

1. This unit is equipped with a temperature regulator, a thermal safety device and a safety plug. It fulfills the international standards for electronic household appliances.
2. Always use a grounded socket.
3. Never leave the unit unsupervised when it is plugged into power outlet. Do not let children handle the unit.
4. The safety cap must not be opened during use.
5. Do not turn the unit by more than 45 degrees from the vertical position during use. This will prevent the boiler from developing leaks.
6. Never point the unit towards people, animals or electrical appliances.
7. Do not clean items of clothing while they are being worn.
8. Never use the unit in the proximity of combustible liquids (e.g. petrol) and gases. (Risk of explosion).
9. Do not use on cold glass otherwise the glass could shatter.
10. Never submerge the unit under water or other liquids. Do not expose the steam cleaner to the hot sun.
11. Always unplug the unit when filling the boiler tank with water.
12. Do not add decalcifiers, aromatics, alcohol or cleaning agents to the water in the boiler. This could damage the unit or put your safety at risk.
13. Do not touch the hot parts when using the unit. If you wish to exchange the accessories wait until the steam cleaner has cooled down.

Warning: Do not let children play with the plastic bags – risk of suffocation. Dispose of the plastic bags properly.

SAVE THESE INSTRUCTIONS

GENERAL SAFETY INSTRUCTIONS



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.




SAFETY WARNING

Although your appliance is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the appliance near a heat source.
2. Do not unplug the unit by pulling on the supply cord.
3. The appliance must be unplugged:
 - A. Before emptying
 - B. Before any cleaning or maintenance
 - C. If it appears to be faulty

LIST OF MAIN PARTS

1. Boiler Tank
2. Safety Cap
3. Steam Trigger
4. Handle
5. Power Cord
6. Indicator Light
7. Water Cup
8. Water Funnel
9. Round Brush
10. Angle Nozzle
11. Jet Nozzle
12. Extension Hose
13. Spray Nozzle
14. Window Cleaning Attachment
15. Window Brush
16. Window Squeegee
17. Cleaning Cloth

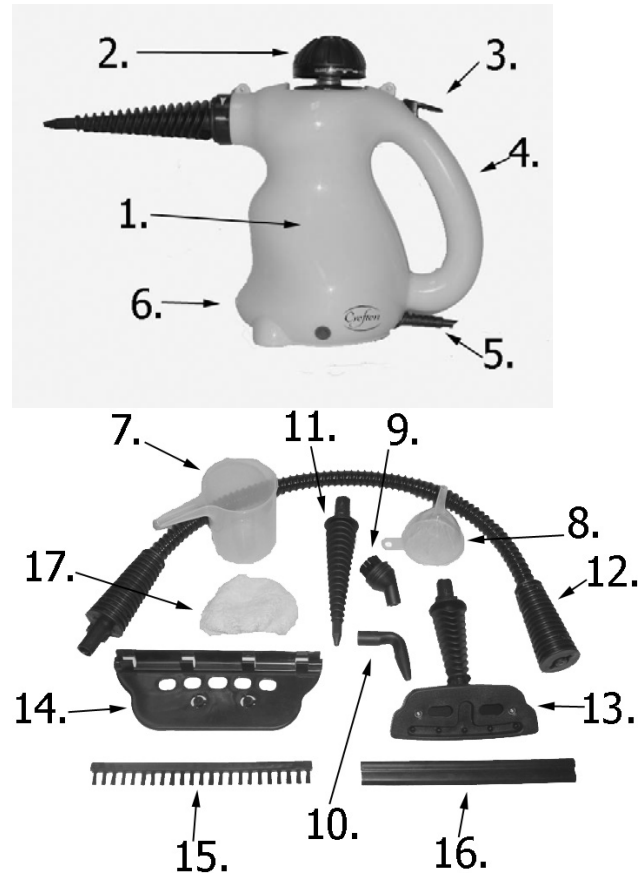

TECHNICAL SPECIFICATIONS

Model Number	PSC-350
Rating Voltage	120V, 60Hz
Rating Wattage	900 Watts
Weight	4 lbs.
Capacity	7.38 oz./220ml

CONTENTS OF PACKAGING

- a. Boiler Tank
- b. Water Cup
- c. Round Brush
- d. Angle Nozzle
- e. Jet Nozzle
- f. Extension Hose
- g. Spray Nozzle
- h. Window Cleaning Attachment
- i. Window Cleaning Brush
- j. Window Cleaning Squeegee
- k. Water Funnel
- l. Instruction Manual

If any of the above items are missing, please contact our service department at 1-888-367-7373 (<http://wwwk.wk-usa.com>) for replacement.

OPERATION

OPERATING THE CROFTON STEAM CLEANER

Warning: This appliance has a grounded (3 prong) plug. Use only in properly installed 3 pronged outlets. Do not attempt to defeat this safety feature.

1. Fill *Water Cup* (7) one time and add to *Boiler Tank* (1). **Please note that the Boiler Tank capacity is only one cup. If more than one cup of water is added Boiler Tank will begin to overflow.**
2. Plug the power cord into an appropriate receptacle. The *Indicator Light* will immediately illuminate. The *Indicator Light* goes on when steamer is plugged into electrical outlet. The steamer has no power switch.

Warning: Be sure the **Jet Nozzle** or other attachment is pointed in a safe direction before pressing the **Steam Trigger**.

3. To begin steam cleaning press the *Steam Trigger*.

Warning: When finished using steamer, unplug the steamer, unscrew cap slowly and wait a few seconds before you unscrew cap completely.

Warning: Do not let the steam cleaner operate with an empty *Boiler Tank* or damage to the unit could occur.

This unit is only designed for household use. If it is used commercially the warranty will no longer be valid. The steam cleaner must not be used to clean electrical devices. If the power cable is damaged, to avoid risks it should only be exchanged by the manufacturer, the manufacturer's service center or a similarly qualified person.

Caution: Before starting to clean designated area you should check all surfaces and materials (especially textiles) to see if they are suitable for steam cleaning. Try it out initially if possible in an inconspicuous place. Never hold the steam spray too long and too close at one point.

Warning: Do not let children play with the plastic bags – risk of suffocation. Dispose of the plastic bags properly.

HOW TO USE YOUR CROFTON STEAM CLEANER

- The *Safety Cap* (2) provides access to the *Boiler Tank* (1) for water filling. It also contains a pressure relief mechanism for safety.
- The *Steam Trigger* (3) controls the release of steam.
- The *Indicator Light* (6) goes on once the plug is inserted into electrical outlet.
- The *Jet Nozzle* (10) provides a concentrated steam of powerful steam for cleaning.
- The *Round Brush* (8) attaches to the *Jet Nozzle* (10) and assists the steam in removing stubborn dirt, grease, grim and stains.
- The *Angle Nozzle* (9) attaches to the *Jet Nozzle* (10) and helps redirect steam to hard to reach areas.
- The *Extension Hose* (11) provides a 29 inch extension for attaching the *Jet Nozzle* (10).

- The *Spray Nozzle* (12) produces spray steam coverage. It provides an attachment point for the *Cleaning Cloth* (14) and the *Window Cleaning Attachment* (13).
- The *Window Cleaning Attachment* (13) attaches to the *Spray Nozzle* (12) and allows you to easily clean your windows, shower doors and mirrors.
- The *Cleaning Cloth* (14), used in combination with the *Spray Nozzle* (12) turns the unit into a Fabric Steam for de-wrinkling and deodorizing all types of fabrics. Do not clean items of clothing while they are being worn.
- The *Water Cup* (7) insures you fill the unit with the correct amount of water. It's built in spout makes adding water easier.

MAINTENANCE



CAUTION:

Always be sure that the appliance is switched OFF and unplugged before cleaning the appliance or attempting to store the item.

CARE AND MAINTENANCE

1. Unplug the unit.
2. Wait for the unit to cool completely (at least 30 minutes).
3. Remove the attachments.
4. Carry unit to a sink or tub.
5. Drain any leftover water from the unit.
6. Flush the boiler tank with fresh water and drain. This helps to remove any mineral residue that may have built up. Repeat this step several times.
7. Store unit.

To ensure the highest level of performance and a long service life rinse out the tank once a month to prevent deposits. Do not use vinegar or decalcifiers.

STORING

Allow the appliance to cool completely before storing. Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.

SERVICE CENTER

If you have any question in regards to the operation of this appliance or are in need of a spare part please contact our service center at:

Wachsmuth & Krogmann, Inc.
 Tel: 1-888-367-7373
 (Business hours Mon-Fri 9:00am - 4:00pm CT)
 Website: <http://www.wk-usa.com>

Defects arising from inexpert handling, damage or attempts to repair the unit by third parties are not covered by the warranty. This also applies to starting up without water in the tank. Normal wear is also excepted from the guarantee. The brushes and cleaning cloths, which are supplied, are particularly liable to (normal) wear over time.

ENVIRONMENTAL PROTECTION

If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way. Please do not put it with your household waste.



LIMITED WARRANTY

Thank you for purchasing a top quality **Crofton** product. This **Crofton Steam Cleaner** item #4294-05 was tested and meets our stringent quality standards. **This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship until December 5, 2007 or 2 year with proof of purchase.**

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to commercial use.

90 day warranty from date of purchase on the included steam cleaner attachments (parts 8-16 on page 4).

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, replacement or refund. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of in connection with use of this product. This warranty is valid only in the United States of America. This Warranty gives you specific legal rights. However you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

In case you find the product to be defective please send it within the warranty period to our service center. To avoid transport damages please send the product in the original packaging. In return you will either receive your repaired item, a new product or a refund. Please fill out the Warranty Card and send it together with the product and purchase receipt

To arrange pick-up of the defective item please call our service center:

Wachsmuth & Krogmann Inc.

Tel: 1-888-367-7373 (Business hours Mon-Fri 9:00am-4:00 pm CT)

Website: <http://www.wk-usa.com>

1800 Nicholas Blvd.

Elk Grove Village, IL 60007

USA

WARRANTY INFORMATION

WARRANTY CARD



Crofton Steam Cleaner, Item #4294-05, Model # PSC-350

In case you find this product to be defective please send it within the warranty period to our service center. To avoid transport damages please send the product in the original packaging. In return you will receive your repaired item, a new product or a refund.

This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship until December 5, 2007 or 2 year with proof of purchase.

Customer Name	
Street	
City	
State	
ZIP Code	
Purchase Date	

Description of Defect :

To arrange pick-up of the defective item please call our service center:

Wachsmuth & Krogmann Inc.
Tel: 1-888-367-7373 (Business hours Mon-Fri 9:00am-4:00 pm CT)
Website: <http://www.wk-usa.com>
1800 Nicholas Blvd.
Elk Grove Village, IL 60007
USA



PLEASE DETACH THIS SECTION AND RETURN IT WITH YOUR PRODUCT

WARRANTY CARD

