

EASY
HOME



USER GUIDE

8" AIR CIRCULATOR FAN



NOW THAT YOU HAVE PURCHASED AN EASY HOME® PRODUCT YOU CAN REST ASSURED IN THE KNOWLEDGE THAT AS WELL AS YOUR MANUFACTURER'S WARRANTY YOU HAVE THE ADDED PEACE OF MIND OF DEDICATED HELPLINES AND WEB SUPPORT

AFTER SALES SUPPORT



1-888-367-7373



customer-service@wk-usa.com

MODEL: EWCF8B, 07/14, 45072-14

2

YEAR WARRANTY

ACCESSORIES

Contents

- 02 Introduction
- 03 General Information and Safety Instructions
- 05 Assembly and Parts List
- 06 Getting Started
- 07 Other Useful Information
- 08 Warranty Card



Congratulations!

You have made an excellent choice with the purchase of the quality Easy Home product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Easy Home product is backed by a comprehensive manufacturer's 2 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

When using an electrical appliance, basic safety precautions should also be observed, including the following. **PLEASE READ AND SAVE ALL INSTRUCTIONS BEFORE USING THE AIR CIRCULATOR FAN.**

1. Always turn the fan off before removing the plug from the outlet.
2. Always turn the fan off and unplug it immediately after using and before cleaning.
3. To protect against electrical hazards, do not place the fan in water or other liquids. Do not allow the fan to become wet or damp.
4. Do not store the fan where it can fall into water or other liquids.
5. Do not store the fan unattended when it is plugged in. Turn the fan off when leaving the fan for an extended period.
6. Use the fan only for its intended use as described in these operating instructions.
7. Do not operate any appliance if its cord or plug is damaged, after the appliance has malfunctioned, or after it has been dropped or damaged in any way. Always follow the warranty instructions.
8. Place fan on a dry flat, level surface to avoid it overturning.
9. Avoid contact with moving parts.
10. Never drop or insert any object into any opening. Do not insert any objects into the area protected by the guards.
11. Do not obstruct the airflow.
12. Do not operate the fan without the guard.
13. Close supervision is necessary when any appliance is operated near children.
14. To maintain operating efficiency, user should not operate this fan 24 hours a day, seven days a week.
15. Do not run the cord under carpeting or cover with throw rugs, runners or similar coverings, or under furniture or appliances. Arrange cord away from traffic areas where it will not be tripped over.
16. This fan employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the fan from the outlet. Replace the fuse (see instructions next page) and check the fan. If the replacement fuse blows, a short circuit may be present and you should contact customer service for instructions.

WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any solid-state speed control device.

THIS APPLIANCE HAS A POLARIZED PLUG (ONE PIN IS WIDER THAN THE OTHER) TO REDUCE THE RISK OF ELECTRICAL SHOCK. THIS PLUG IS DESIGNED TO FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, TRY THE PLUG THE OTHER WAY AROUND. IF THE PLUG STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT ATTEMPT TO ALTER, DISMANTLE OR FIND ANOTHER WAY AROUND THIS SAFETY FEATURE.

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.


SAFETY WARNING

Although your appliance is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the appliance near a heat source.
2. Use the appliance on a stable surface.
3. Do not unplug by pulling on the supply cord.
4. The appliance must be unplugged:
 - A. Before any cleaning or maintenance.
 - B. If it appears to be faulty.

TO REPLACE FUSE:

1. Grasp plug and remove from the receptacle or other outlet device. **CAUTION:** Do not unplug by pulling on the power cord.
2. Open the fuse compartment cover on top of the plug by sliding it towards the blades.
3. Using a small flat blade screwdriver, carefully remove the fuse by prying it up from the end closest to the cord.
4. Replace the fuse with a 2.5amp, 125-volt fuse (not included).
5. Close the fuse compartment cove by sliding it away from the blades.
6. **WARNING:** Risk of fire. Do not replace the plug as it contains a safety device (fuse) that should not be removed. Contact customer service if the plug is damaged.

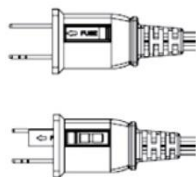

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

Main Parts

1. 3-Speed Knob
2. Concealed Carrying Handle
3. Wall Mount Opening



Contents of Packaging

1. Instruction Manual
2. Air Circulator

If any of the above items are missing, please contact our service department at 1-888-367-7373 or email us at customer-service@wk-usa.com for replacements. Our business hours are Mon-Fri 10:00 AM - 5:00 PM EST.

How to Operate

1. Place the fan on a level and dry surface. Plug the power cord into a polarized 120V AC wall outlet.
2. Select the desired speed (OFF) 0, (High) H, (Medium) M, (Low) L.
3. Adjust the angle of the fan to the desired air output direction.
4. To move the fan, turn fan OFF and use concealed carrying handle on back of fan.

Wall Mounting (optional)

1. Locate and mark a suitable position on the wall to mount the fan (preferably at a wall stud).
2. Hold the fan against the wall at the location you would like it to be installed.
3. Use a pencil to mark the location of the mount opening screw holes on the base of the fan. Place fan aside and drill pilot holes through the marks you have made on the wall.
4. Insert anchors (not included) into the holes.
5. Place mount screws (not included) through the holes in the wall mount openings, and then place the fan into position on the wall.
6. Tighten the screws until the wall mount is flush against the wall.
7. Once securely attached to the wall, the fan can be plugged into an electrical outlet.

Technical Specifications

Model Number	EWCF8B
Rating Voltage	120V – 60Hz
Rated Wattage	35W

Maintenance

CAUTION: Always be sure that the appliance is switched OFF before cleaning the appliance or attempting to store the item. DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.

1. Before cleaning, turn the fan off and unplug from electrical outlet.
2. Wipe off excess dust with a lint free cloth.
3. DO NOT immerse the fan in water and never allow the water to enter the motor housing.
4. DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
5. DO NOT use abrasive cleaner to clean the fan.

STORING

Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.

Service Center

If you have any questions in regards to the operation of this appliance please contact our service center at:

Wachsmuth & Krogmann, Inc.

Tel: 1-888-367-7373 Email: customer-service@wk-usa.com

(Business hours Mon - Fri 10:00 AM - 5:00 PM EST)

Environmental Protection

If the appliance should no longer work at all, please make sure that it is disposed of in an environmentally friendly way.

8" AIR CIRCULATOR FAN

Your details:

Name _____

Address _____



_____ E mail _____

Date of purchase* _____

*We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:

If you have a malfunction please contact our

Customer Service department and send this
completed warranty card with the receipt to:

Wachsmuth & Krogmann, Inc.

621 IL Route 83

Suite 202

Bensenville, IL 60106

customer-service@wk-usa.com

AFTER SALES SUPPORT



1-888-367-7373



customer-service@wk-usa.com

MODEL: EWCF8B, 07/14, 45072-14

2

YEAR WARRANTY