

EASY
HOME®



USER GUIDE

ORGANIZER DESK LAMP



NOW THAT YOU HAVE PURCHASED AN EASY HOME® PRODUCT YOU CAN REST ASSURED IN THE KNOWLEDGE THAT, AS WELL AS YOUR MANUFACTURER'S WARRANTY, YOU HAVE THE ADDED PEACE OF MIND OF DEDICATED HELPLINES AND WEB SUPPORT.

AFTER SALES SUPPORT



USA

1 888 367 7373



customer-service@wk-usa.com

MODEL: KX-3181, 07/14, ITEM # 45341-14

2

YEAR WARRANTY

ACCESSORIES

Contents

- 02 Introduction
- 03 General Information and Safety Instructions
- 05 Assembly and Parts List
- 06 Getting Started and Features
- 07 Other Useful Information
- 08 Warranty Card

Congratulations!

You have made an excellent choice with the purchase of the quality Easy Home product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Easy Home product is backed by a comprehensive manufacturer's 2 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.



When using an electrical appliance, basic safety precautions should also be observed, including the following. **PLEASE READ AND SAVE ALL INSTRUCTIONS BEFORE USING THE ORGANIZER DESK LAMP.**

1. Always turn the desk lamp off before removing the plug from the outlet.
2. Always turn the desk lamp off and unplug it immediately after using and before cleaning.
3. To protect against electrical hazards, do not place the desk lamp in water or other liquids. Do not allow the desk lamp to become wet or damp.
4. Do not store the desk lamp where it can fall into water or other liquids.
5. Do not leave the desk lamp unattended when it is plugged in. Turn the desk lamp off when leaving for an extended period.
6. Use the desk lamp only for its intended use as described in these operating instructions.
7. Do not operate any appliance if its cord or plug is damaged, after the appliance has malfunctioned, or after it has been dropped or damaged in any way. Always follow the warranty instructions.
8. Place the desk lamp on a dry flat, level surface to avoid it overturning.
9. This desk lamp is for indoor use only.
10. Keep the desk lamp away from curtains, draperies, and other flammable materials.
11. Never use the desk lamp with wet hands.
12. Never look directly into the light or touch the bulb when it is switched "On". If you need to change the bulb, allow at least 30 minutes after the unit has been turned "Off" and unplugged.
13. Close supervision is necessary when any appliance is operated near children.
14. Replace the bulb only with a maximum of a 40W bulb.
15. Do not run the cord under carpeting or cover with throw rugs, runners or similar coverings, or under furniture or appliances. Arrange cord away from traffic areas where it will not be tripped over.
16. Unplug the desk lamp from the wall outlet when not in use for long periods of time or before moving the desk lamp

IMPORTANT SAFETY INSTRUCTIONS

THIS APPLIANCE HAS A POLARIZED PLUG (ONE PIN IS WIDER THAN THE OTHER) TO REDUCE THE RISK OF ELECTRICAL SHOCK. THIS PLUG IS DESIGNED TO FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, TRY THE PLUG THE OTHER WAY AROUND. IF THE PLUG STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT ATTEMPT TO ALTER, DISMANTLE OR FIND ANOTHER WAY AROUND THIS SAFETY FEATURE.



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.

SAFETY WARNING

Although your desk lamp is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the desk lamp near a heat source.
2. Use the desk lamp on a stable surface.
3. Do not unplug by pulling on the supply cord.
4. The appliance must be unplugged:
 - A. Before any cleaning or moving.
 - B. If it appears to be faulty.
 - C. After use.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

4

Main Parts

1. ON / OFF Knob
2. Light Shade
3. Extra Power Outlet
4. Organizer Base
5. Flexible Gooseneck



Contents of Packaging

1. Instruction Manual
2. Organizer Desk Lamp
3. 40W Bulb

If any of the above items are missing, please contact our service department at 1-888-367-7373 or email us at customer-service@wk-usa.com for replacements. Our business hours are Mon-Fri 10:00 AM - 5:00 PM EST.

How to Operate

1. Place the desk lamp on a level and dry surface.
2. Screw in the 40 W bulb that is provided.
3. Plug the power cord into a polarized 120V AC wall outlet.
4. Turn the ON / OFF knob to turn the lamp ON or OFF.

Features



Organizer base can hold pens, pencils, note pads, and paper clips



Extra power outlet for your accessories



Easy to use ON / OFF knob



Flexible gooseneck to easily adjust angle and height of shade.
CAUTION: DO NOT try to flex the gooseneck backwards too far or it can break.

Technical Specifications

Model Number	KX-3181
Rating Voltage	120V – 60Hz
Rated Wattage	40W

Maintenance

CAUTION: Always be sure that the desk lamp is switched OFF before cleaning or attempting to move or store the desk lamp. DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.

1. Before cleaning, turn the desk lamp off and unplug from electrical outlet.
2. Wipe off excess dust with a lint free cloth.
3. You may use a damp cloth to wipe the shade and base.
4. DO NOT immerse the desk lamp in water.

STORING

Store the desk lamp in a dry location. Do not place any heavy items on top of the desk lamp during storage as this may result in possible damage of the desk lamp.

Service Center

If you have any questions in regards to the operation of this appliance please contact our service center at:

Wachsmuth & Krogmann, Inc.

Tel: 1-888-367-7373 Email: customer-service@wk-usa.com

(Business hours Mon - Fri 10:00 AM - 5:00 PM EST)

Environmental Protection

If the desk lamp should no longer work at all, please make sure that it is disposed of in an environmentally friendly way.

210mm

EASY HOME[®]

ORGANIZER DESK LAMP

Your details:

Name _____

Address _____



_____ E mail _____

Date of purchase* _____

*We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:

If you have a malfunction please contact our Customer Service department and send this completed warranty card with receipt to:

Wachsmuth & Krogmann, Inc.
621 IL Route 83
Suite 202
Bensenville, IL 60106
customer-service@wk-usa.com

AFTER SALES SUPPORT



USA

1 888 367 7373



customer-service@wk-usa.com

MODEL: KX-3181, 07/14, ITEM # 45341-14

Phone lines available Monday to Friday, 10am-5pm EST

2

YEAR WARRANTY

260.4mm



Black