



door or window alarm

instruction sheet

Please keep these instructions in a safe place for future reference

Contents:


- 2 sets of window/door alarms (batteries installed)
- 3 x LR44 batteries (installed)

The window/door alarm is especially designed for to provide extra security and peace of mind by sounding an alarm when an intruder tries to open a window or door.

There is no assembly required.

Installation: No tools are required.

- When you are ready to install, place each piece of 1 set on the window or door you wish to secure.
- Double check that the 2 pieces will not be more than 1/2" apart.
- Remove the backing on the adhesive strip on the back of the Magnetic Contact and firmly press into place on the door or window.
- Pull the plastic tab between the battery compartment and battery to activate the battery.
- Remove the backing on the Main Unit, line up the 2 arrows (see below) and press firmly into place on the window or door frame.

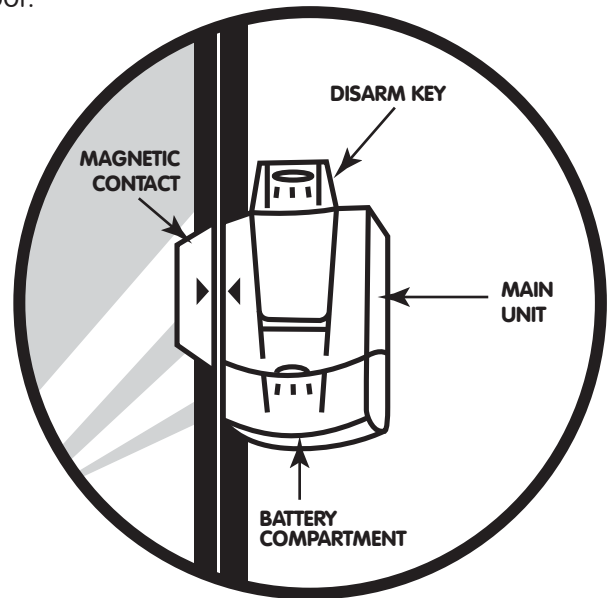

Operation:

- When the 2 arrows are lined up and the units are securely in place, remove the Disarm Key by pulling up on the Key.
- When the window or door is opened or the Disarm Key is removed, it will sound a loud alarm.
- Keep the Disarm Key close by to use when you want to disarm the unit or after the alarm has been tripped.

Alarm volume: 89 dB(A) measured at a distance of 3 feet.

Battery Replacement:


- Open the battery compartment cover (shown above) by sliding the cover down.
- Remove the 3 old batteries and replace with 3 new LR44 button cell alkaline batteries following the polarity diagram.
- Replace the battery compartment cover.

Caution:

- **Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage.**
- Do not mix old and new batteries or other battery types
- Replace all batteries of the same kind at the same time
- Replace fully discharged batteries immediately

Note:

This product is designed to be a deterrent. It is an alarm signal. It does not guarantee protection.

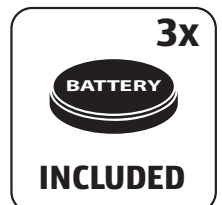



alarma de puerta o ventana

hoja de instrucciones

Mantenga estas instrucciones en un lugar seguro para referencia futura

Contenido:


- 2 juegos de alarmas de ventana/puerta (pilas instaladas)
- 3 pilas LR44 (instaladas)

La alarma de ventana/puerta está diseñada especialmente para ofrecer seguridad adicional y paz mental haciendo sonar una alarma cuando un intruso trata de abrir una ventana o puerta.

No se requiere ningún ensamblaje.

Instalación: No se requieren herramientas

- Cuando esté listo para instalarla, coloque cada pieza de 1 juego en la ventana o puerta que desee resguardar.
- Verifique que las 2 piezas no estén a más de 1/2" (12mm) de distancia.
- Quite la película de la cinta adhesiva en la parte posterior del contacto magnético y presione con firmeza en la puerta o ventana.
- Retire la pestaña de plástico entre el compartimiento de la pila y la pila para activar la pila.
- Quite la película de la unidad principal, alinee las 2 flechas (ver a continuación) y presione con firmeza sobre el marco de la ventana o puerta.

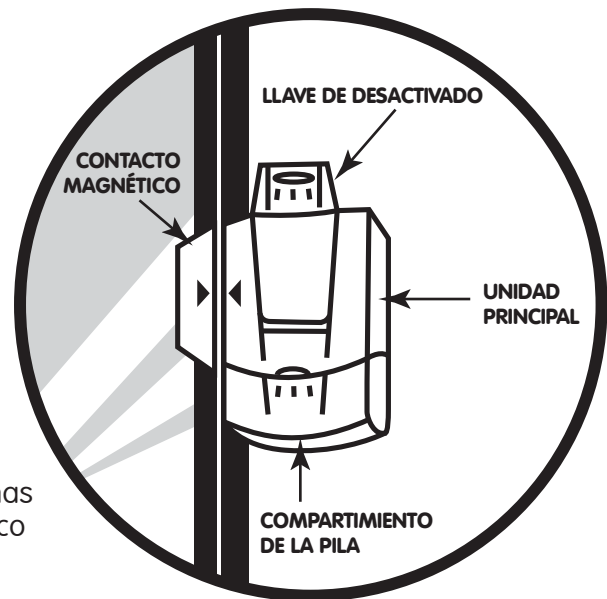

Funcionamiento:

- Cuando las 2 flechas estén alineadas y las unidades estén fijadas, quite la llave de desactivado tirando de esta.
- Cuando la ventana o la puerta se abra y no esté colocada la tecla de desactivado, sonará una alarma fuerte.
- Mantenga la llave de desactivado cerca para usarla cuando desee desactivar la unidad o después de que se haya activado.

Volumen de la alarma: 89 dB(A) medidos a una distancia de 3 pies (0.9 metros).

Reemplazo de la pila:

- Abra el compartimiento de la pila (ilustrado arriba) deslizando la tapa hacia abajo.
- Quite las 3 pilas viejas y reemplácelas con 3 pilas alcalinas de botón LR44 nuevas acorde al diagrama de polaridad.
- Vuelva a colocar la tapa del compartimiento.

Precaución:

- **Las pilas pueden derramar líquidos dañinos o materiales inflamables, o bien explotar y causar lesiones y daños al producto.**
- No mezcle pilas nuevas y viejas o de diferentes tipos.
- Reemplace todas las pilas del mismo tipo al mismo tiempo.
- Reemplace de inmediato las pilas descargadas por completo.

Nota:

Este producto está diseñado como elemento disuasivo. Es una señal de alarma. No garantiza ninguna protección.

