

EASY
HOME®

USER GUIDE

WARM MIST HUMIDIFIER



NOW THAT YOU HAVE PURCHASED AN EASY HOME® PRODUCT YOU CAN REST ASSURED IN THE KNOWLEDGE THAT AS WELL AS YOUR MANUFACTURER'S WARRANTY YOU HAVE THE ADDED PEACE OF MIND OF DEDICATED HELPLINES AND WEB SUPPORT

AFTER SALES SUPPORT

☎ 1-888-367-7373 🖥 customer-service@wk-usa.com

MODEL: EE-5200 W, 12/14, 1768-14

2

YEAR WARRANTY

ACCESSORIES

Contents

- 02** Introduction
- 03** General Information and Safety Instructions
- 05** Assembly and Parts List
- 06** Getting Started
- 11** Other Useful Information
- 12** Warranty Card

Congratulations!

You have made an excellent choice with the purchase of the quality Easy Home product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Easy Home product is backed by a comprehensive manufacturer's 2 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.



When using an electrical appliance, basic safety precautions should also be observed, including the following. **PLEASE READ AND SAVE ALL INSTRUCTIONS BEFORE USING THE WARM MIST HUMIDIFIER.**

- DO NOT carry water tank by handle when it is filled with water. It is advisable to carry filled water tank with two hands.
- DO NOT operate outdoors. This humidifier is intended for indoor use only.
- DO NOT TOUCH THE STEAM VAPOR. Steam can cause burns.
- DO NOT remove the water tank during operation or within 15 minutes after the humidifier is turned off and unplugged. Serious injury may result.
- DO NOT operate without water. Always have water in the water tank when operating the humidifier.
- Use only clean, cool tap water to fill the tank. DO NOT use hot water.
- DO NOT pour water in any openings other than the water tank.
- Be sure that the water tank cap is firmly tightened. DO NOT aim mist directly at children, walls, furniture, or electrical appliances.
- Use only a 110-120VAC outlet. **ALWAYS plug and unplug humidifier with dry hands.**
- Never operate the humidifier with a damaged power supply cord or plug.
- Always place the humidifier on a smooth, flat, lint free, non-metallic, waterproof, level surface, and away from direct sunlight. Keep the power supply cord away from heated surfaces and areas where it could be walked on or tripped over. Unplug the humidifier when not in use and whenever you clean or move the humidifier.
- DO NOT add medication of any type into the mist channel, base or water tank. Do not cover any openings on the humidifier or insert objects into any openings. ONLY add liquid vapor medicine to the medicine cup included with the humidifier.
- The humidifier should not be left unattended in a closed room as the air could become saturated and leave condensation on walls or furniture. Leave room door partly open.
- The humidifier requires daily and weekly cleaning to operate appropriately. Refer to cleaning instructions.
- NEVER use detergents, gasoline, glass cleaner, furniture polish, paint thinner or other household solvents to clean any part of the humidifier.
- Do not tilt or tip the unit or attempt to empty or fill it while it is in operation.

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

READ AND SAVE ALL INSTRUCTIONS!

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

- To avoid a circuit overload when using this humidifier, do not operate another high-wattage product on the same electrical circuit.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However if you have to use an extension cord, the extension cord should be rated for 13 amps, 125V, 1625 watts.
- The power supply cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

ELECTRIC POWER

If the electric circuit is overloaded with other appliances, your humidifier may not operate properly. The humidifier should be operated on a separate electrical circuit from other operating appliances.

POLARIZED PLUG

This humidifier has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAFETY WARNING

Although your Warm Mist Humidifier is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the Warm Mist Humidifier near a heat source.
2. Never leave the Warm Mist Humidifier unattended while connected to the electrical outlet.
3. To avoid any accidental burns, never put a hand over front net guard or cover when the Warm Mist Humidifier is in operation.
4. Use the Warm Mist Humidifier on a stable surface away from water.
5. Do not unplug the Warm Mist Humidifier by pulling on the power supply cord.
6. The Warm Mist Humidifier must be unplugged:
 - A. Before any cleaning or maintenance.
 - B. After use.
 - C. If it appears to be faulty.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

Main Parts

1. Mist chamber
2. Humidifier base
3. Water level sensor
4. Tip over switch (bottom)
5. Heating element
6. Control knob
7. Indicator light
8. Reset button (bottom)
9. Medicine cup
10. Water tank
11. Water tank cap



Contents of Packaging (Note: Humidifier is pre-assembled and ready to use)

- Humidifier base
- Water tank
- Mist channel
- Mist chamber
- Medicine cup
- Instruction manual

If any of the above items are missing, please contact our customer service department at 1-888-367-7373 or email us at customer-service@wk-usa.com for replacements. Our business hours are Mon-Fri 10:00 AM - 5:00 PM EST.

Before First Use

CHECK HUMIDIFIER PLACEMENT - Place the Humidifier on a non-metallic, lint free, waterproof, level surface for best performance. This is to help disperse the mist in the air and prevent it from being knocked or tipped over.

CAUTION:

DO NOT operate the humidifier without water in the water tank.

DO NOT plug in the power supply cord with wet hands; electric shock could happen.

- Be sure the humidifier is switched to OFF (O) and the humidifier is unplugged from the electrical outlet.
- Select a location for your humidifier on a flat surface approximately 4 inches away from a wall.
- **DO NOT** place the humidifier on a finished floor or near furniture which can be damaged by moisture or water. Place on a water resistant surface.
- **DO NOT** place Humidifier on top of a towel, or a carpeted surface. The air vent on the bottom may become blocked, and overheat the humidifier.



How to Operate

CAUTION: ALWAYS USE CAUTION WHEN HANDLING WARM MIST HUMIDIFIER. DO NOT DROP THE WARM MIST HUMIDIFIER.

- Lift the water tank off the humidifier base.
- Turn over the water tank and unscrew the water tank cap at the bottom of the tank by turning it counterclockwise. (See Fig. 6)



Fig. 6

- Fill water tank with cold water; do not fill all the way to the rim. (See Fig. 7) **DO NOT CARRY FULL WATER TANK BY HANDLE. ALWAYS HOLD FULL WATER TANK WITH TWO HANDS ON EITHER SIDE OF THE WATER TANK.**
- **DO NOT** use hot water. Use cool tap water.
- **DO NOT** add any medication to the water.
- **DO NOT** pour water into Mist Channel.



Fig. 7

- Replace the water tank cap, aligning the threads on the tank with the threads on the cap, and turn it clockwise (See Fig. 8).



Fig. 8

- Turn the tank over, holding one hand by the top handle and another hand under the water tank. Place the full water tank on the base, making sure it fits securely. Place the medicine cup on top of the mist channel.
- Plug the power supply cord into a wall socket and turn on the unit. The On/Off dial is located on the base.
- The power light will turn blue.
- Use the On/Off dial to adjust the intensity of the mist output by selecting either (1) for lower mist output or (2) for higher mist output.
- When the humidifier runs out of water the blue power light will turn off and the mist output will stop. This safety feature uses a water level sensor to turn off the heating element once the water level sinks below the required level in the water basin. A small orange light will appear to indicate that the humidifier has automatically turned off. Turn the humidifier off and unplug before removing and refilling the water tank.

IMPORTANT: OVERHEAT RED LIGHT

When the humidifier runs out of water, the BLUE light will turn off and mist will stop. If the unit has overheated, a small RED light will turn on (light will appear near the "2" on Control Knob). The RED light indicates that the unit has overheated. Turn the humidifier off, unplug the unit, allow the basin and water to cool, then empty water in basin. Turn the humidifier basin over and press the Reset Button, with a pen or pencil tip, on the bottom of the Water Basin. This will reset the humidifier.

HOW TO USE THE MEDICINE CUP

The medicine cup allows the addition of medications recommended for use with warm mist humidifiers only.

- Remove the medicine cup from the top of the mist chamber for easier filling.
- BE CAREFUL not to overfill the medicine cup. Overfilling may cause medicine to spill into mist chamber. Medicine in the mist chamber may affect the operation of the humidifier.
- Place medicine cup on top of the mist chamber.
- DO NOT add any medication or other additives directly to the water.



A NOTE ABOUT HUMIDITY

- It is best to keep the humidity level at about 30-50 percent of relative humidity.
- The comfort level of humidity will vary from room to room and with changing weather conditions.
- In cold weather, windows and even some walls may fog or develop frost from excessive indoor humidity. If this occurs, reduce the mist intensity setting to avoid damage from condensed water dripping on windowsills.
- Too much humidity in the room may allow moisture to accumulate on surfaces where bacteria and fungi can grow. Moisture that gathers may also damage furniture and walls, especially wallpaper.
- To eliminate excessive humidity, especially in small rooms, leave the room door open and adjust the mist intensity control setting.

CARE AND CLEANING

Portable humidifiers require regular cleaning in order to reduce the risk of bacterial growth, and to remove any scale residue to maintain good operational performance. Follow the procedures below for healthy maintenance of your Warm Mist Humidifier.



Daily Maintenance

1. Turn switch to off (O) and unplug from the wall outlet.
2. Be sure the unit has cooled for at least 15 minutes. Lift the water tank from base and place in sink or tub.
3. Carry the humidifier base to the sink and drain any remaining water. Wipe clean and dry with a clean cloth.
4. Drain water from the water tank. Wipe clean, and dry with a clean cloth. Let the water tank air dry when not in use.

Weekly Maintenance (Removing Scale)

NOTE: We recommend cleaning the humidifier weekly or more often if you have hard water or notice a build-up of impurities or detect unpleasant odors.


Repeat steps 1-4 above.

How to Clean the Water Tank

1. Fill water tank with $\frac{1}{2}$ cup water and $\frac{1}{2}$ tablespoon of bleach.
2. Let stand twenty minutes, shaking vigorously with two hands every few minutes.
3. Carefully empty the tank after 20 minutes, and rinse with warm water until you can no longer detect a bleach smell.

How to Clean the Heating Element in the Base

1. To remove the mist chamber, slide the mist chamber latch to the left and carefully lift the mist chamber off the water basin.
2. Fill the heating element with undiluted white vinegar.
3. Let stand for 20 minutes. Dampen soft, clean cloth or sponge with undiluted white vinegar and wipe out heating element to remove scale. **DO NOT** use soap, detergents or abrasive cleaners.
4. Rinse heating element using clean warm water, being careful not to submerge the base in the water. Dry thoroughly. **DO NOT IMMERSE WATER BASIN IN WATER.**
5. Soak the removable mist chamber in a solution of equal parts white vinegar and water for 20 minutes. Rinse thoroughly and then wipe dry with a soft clean cloth.
6. To attach the mist chamber, slide the mist chamber latch to the left and place the mist chamber onto the water basin. Release the latch to secure the mist chamber to the water basin.

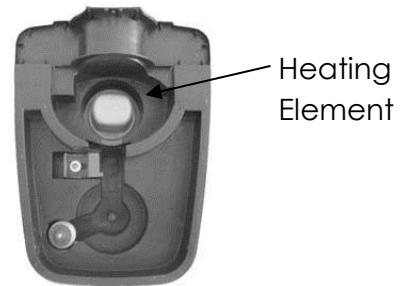

How to Clean Humidifier Exteriors

1. DO NOT IMMERSE THE BASE IN WATER OR ANY OTHER LIQUID. An electric shock may result or the humidifier may be damaged.
2. Wipe all exterior surfaces of the base with a soft, dry cloth.

End of Season Maintenance and Storing

1. Follow above weekly cleaning procedure at the end of the humidification season, or when the humidifier will not be used for several days, being sure to dry all parts. Allow the water tank to thoroughly air dry before storage. DO NOT store with water inside any part of the humidifier.
2. Leave tank cap partially loosened during storage to prevent tank cap and gasket from sticking together. This will prolong the life of the gasket.
3. Save original box for easy storage. Store humidifier in a cool dry location. Do not place any heavy items on top of humidifier during storage as this may result in possible damage of humidifier.

Troubleshooting

CAUTION: DO NOT attempt to repair the motor or nebulizer yourself. If the humidifier continues to not operate please call our service center.

Problem	Solution
If humidifier does not have any power:	<ul style="list-style-type: none"> ▪ Ensure unit is properly plugged into a power outlet. ▪ Check that the Control Knob is turned to the ON position. ▪ If Power On indicator light does not come on, contact customer-service@wk-usa.com.
Condensation forms around humidifier and windows:	<ul style="list-style-type: none"> ▪ Adjust Control Knob to decrease mist output to low. ▪ Leave room door cracked open during humidifier operation.
If humidifier has stopped, BLUE light is off and small RED light is on:	<ul style="list-style-type: none"> ▪ Adjust Control Knob to turn humidifier off and unplug. Empty water basin, turn over and press Reset Button on bottom of humidifier.
If there is a strange odor:	<ul style="list-style-type: none"> ▪ Clean the Water Tank with the water and vinegar solution and rinse with clean water. ▪ Leave the empty Water Tank open for some time (without the Water Tank Cap attached) in a cool place.
The power indicator light is blue, but there is no mist being emitted:	<ul style="list-style-type: none"> ▪ Check that there is water in the Water Tank. ▪ Make sure that nothing is blocking the mist output. ▪ Check that the Fan Vent on the bottom of the humidifier is not blocked. ▪ Empty and rinse the Water Basin with cool tap water. ▪ Check for possible mineral deposits on the Water Level Sensor and Heating Element.



Technical Specifications

Model Number	EE-5201W
Rating Voltage	120V – 60Hz
Rated Wattage	280W

Maintenance

IMPORTANT: Failure to keep this humidifier clean from mineral deposits normally contained in any water supply will affect the efficiency of the operation. Customer failure to follow these instructions may void the warranty.

CAUTION:

Always be sure that the humidifier is unplugged and switched OFF before cleaning or attempting to store the humidifier. **NEVER PLUG OR UNPLUG HUMIDIFIER WITH WET HANDS.**

DO NOT leave water in the water tank or water basin when the humidifier is not in use. If water remains in the water tank for more than a day or two, bacterial growth is possible.

STORING

Store the Warm Mist Humidifier in a dry location. Do not place any heavy items on top of item during storage as this may result in possible damage.

Service Center

If you have any questions in regards to the operation of this appliance please contact our service center at:

Wachsmuth & Krogmann, Inc.

Tel: 1-888-367-7373 Email: customer-service@wk-usa.com

(Business hours Mon - Fri 10:00 AM - 5:00 PM EST)

Environmental Protection

If the appliance should no longer work at all, please make sure that it is disposed of in an environmentally friendly way

WARM MIST HUMIDIFIER

Your details:

Name _____

Address _____

 _____ E mail _____

Date of purchase* _____

*We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:

If you have a malfunction please contact our
Customer Service department and send this
completed warranty card with the receipt to:

Wachsmuth & Krogmann, Inc.

621 IL Route 83

Suite 202

Bensenville, IL 60106

customer-service@wk-usa.com

AFTER SALES SUPPORT



1-888-367-7373



customer-service@wk-usa.com

MODEL: EE-5200 W, 12/14, 1768-14

Phone lines available Monday thru Friday,
10am - 5pm EST

2

YEAR WARRANTY